


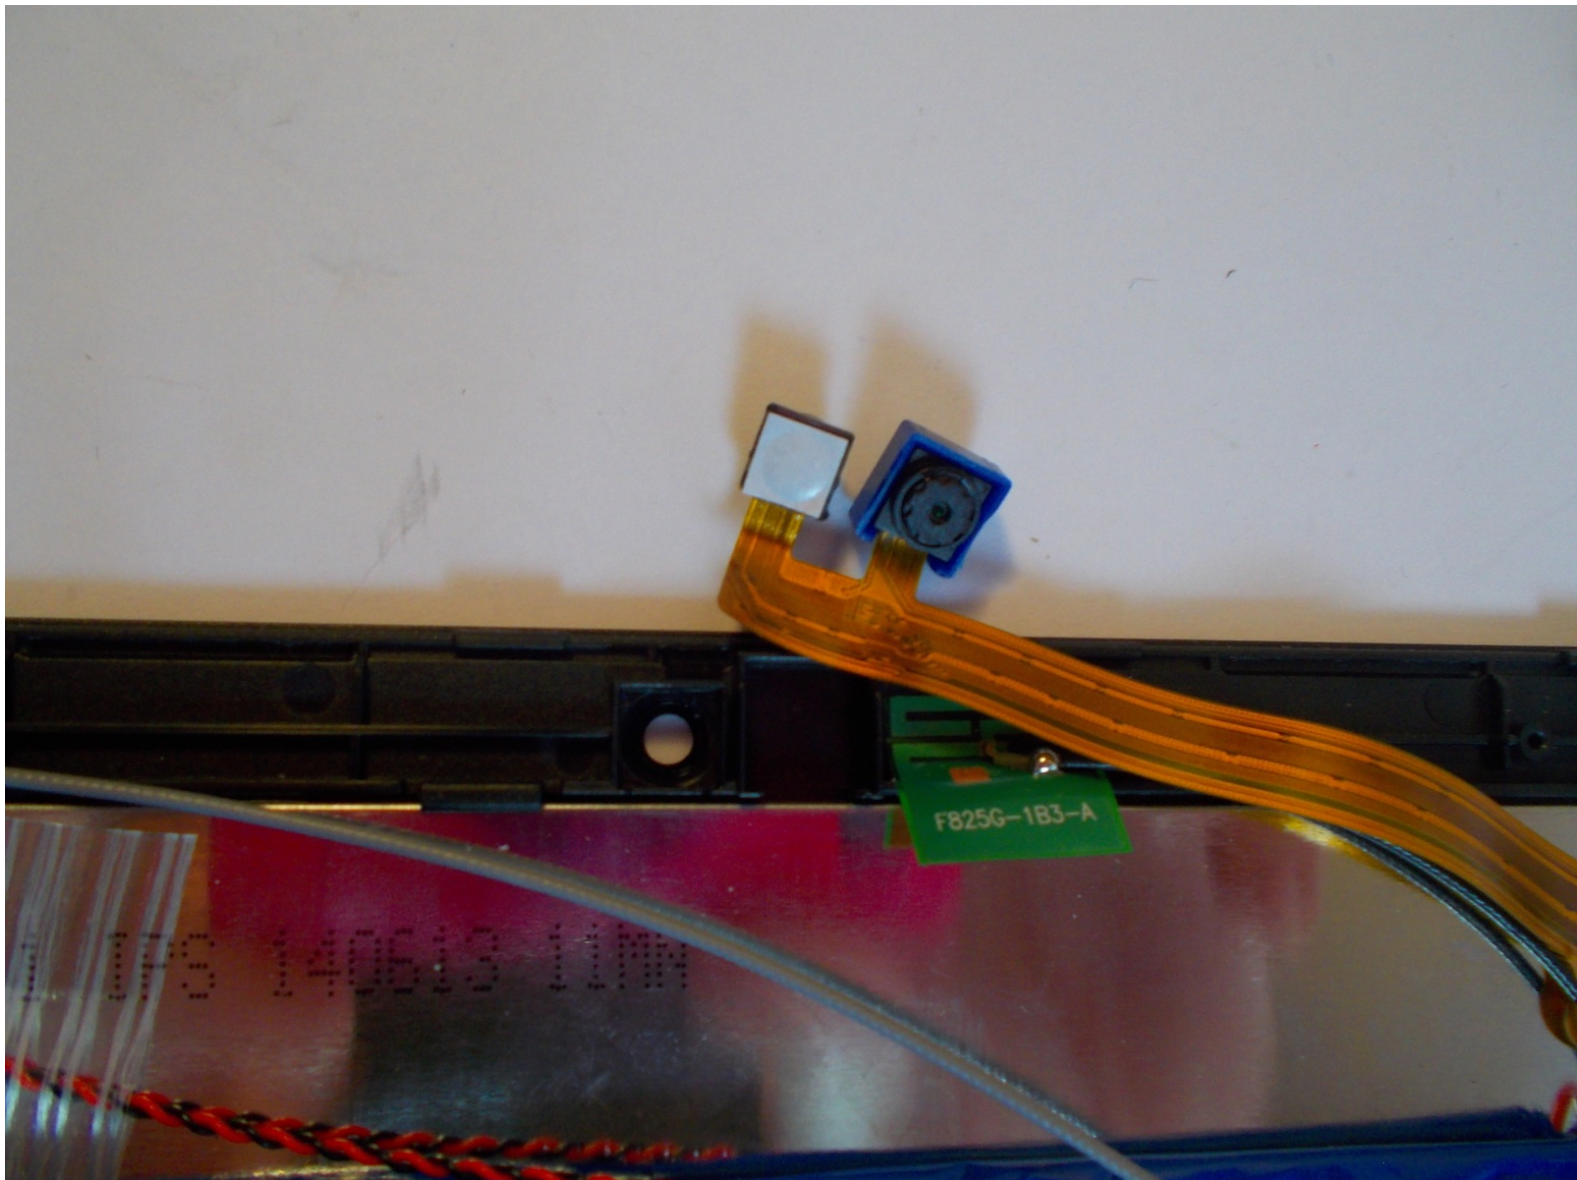

NuVision TM1088 Camera Replacement

Replacing a broken front and rear camera.

Written By: Nathaniel Nasman



INTRODUCTION

This guide will show you how to remove the front and rear cameras. The front and rear cameras must be replaced together.



TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Cover




- Place the plastic opening tool between the front and rear cover and pry up on each corner of the cover.

Step 2 — Camera

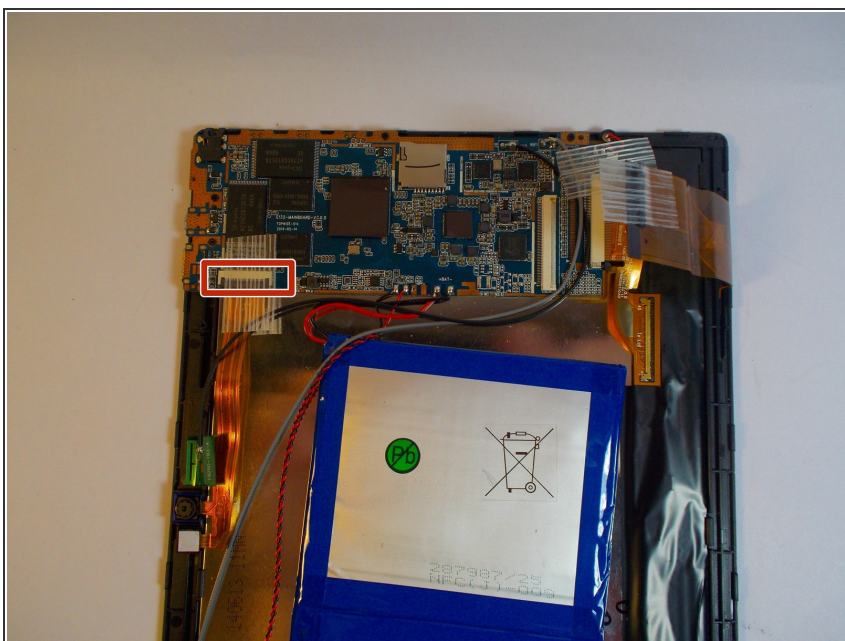

- Pull camera plug upward and away from the motherboard.

Step 3

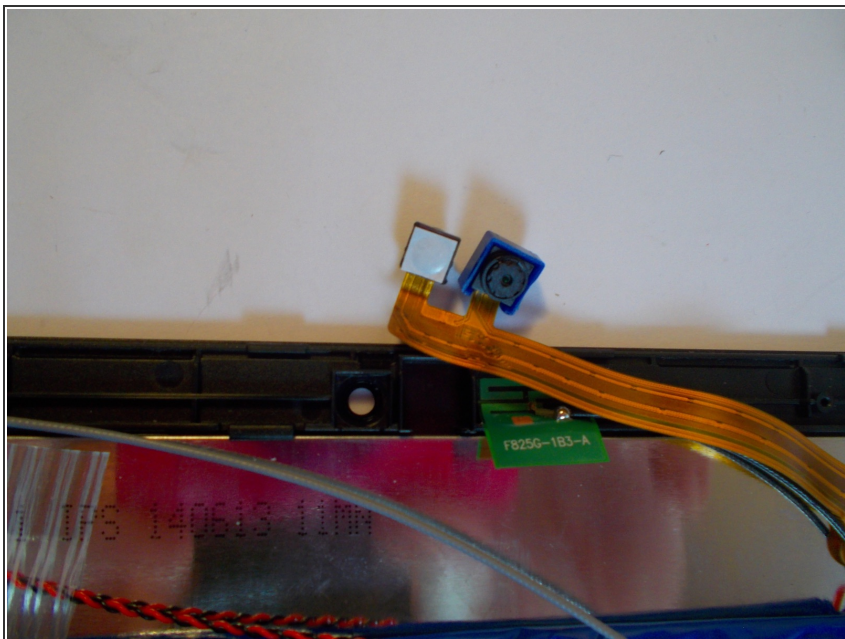

- Remove each camera from the front cover assembly. They are simply held in by tension.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 07:04:17 AM.